



TA01116-GS

Toaster.....3

SE Brödrost.....8







TECHNICAL DATA

Model: TA01116-GS. Voltage: 220-240 V ~ 50-60 Hz.

Power: 650 W.

IMPORTANT SAFEGUARDS

EN

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Ensure that your outlet voltage corresponds to the voltage stated on the rating label of the toaster.
3. Do not touch hot surfaces. Use handles or knobs only.
4. To protect against electrical shock, do not immerse the cord, plug, or any part of the toaster in water or other liquids.
5. Close supervision is necessary when the toaster is used by or near children.
6. Unplug the unit from the outlet when not in use and before cleaning.
7. Do not operate any appliance with a damaged cord or plug, or if the appliance is malfunctioning. If the main cord is damaged, it must be replaced by the manufacturer, the nearest service agent, or a qualified person.
8. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
9. Do not place the toaster on or near a hot gas or electric burner, or in a heated oven.
10. Do not use the appliance for other than its intended use.
11. Oversized food, metal foil packages, or utensils must not be inserted into the toaster as they may cause fire or electric shock.
12. Bread may burn; therefore, toasters must not be used near or below curtains and other combustible materials. They must be watched.
13. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
14. Do not attempt to dislodge food when the toaster is in operation.
15. Be sure to remove the bread carefully after toasting to avoid injuries.
16. This appliance has a grounded plug. Please ensure the wall



TECHNICAL DATA

Model: TA01116-GS. Voltage: 220-240 V ~ 50-60 Hz.

Power: 650 W.

EN IMPORTANT SAFEGUARDS

- outlet in your house is well earthed.
17. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
 18. This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
 19. Keep the appliance and its cord out of reach of children less than 8 years old.
 20. Warning: If toasting small bread slices less than 85mm in length, be aware of the potential risk of burning when removing the slices.
 21. Do not use the appliance outdoors.
 22. This appliance is intended for household and similar applications such as:
 - o Staff kitchen areas in shops, offices, and other working environments;
 - o Farmhouses;
 - o By clients in hotels, motels, and other residential-type environments;
 - o Bed and breakfast-type environments.
 23. Save these instructions.

ENERGY CONSUMPTION

Product information for power consumption and maximum time to reach applicable low power mode.

Off model

0.1 W

The maximum time needed the equipment to automatically reach the applicable low power mode or condition.

1min



TECHNICAL DATA

Model: TA01116-GS. Voltage: 220-240 V ~ 50-60 Hz.

Power: 650 W.

OPERATION


EN

PRODUCT INTRODUCTION

FOR THE FIRST USE

As there may be manufacturing residue or oil remaining in the toaster or heating element, it may emit an odor during the first use. This is normal and will not occur after several uses. Before toasting the first slice of bread, it is strongly suggested to operate the appliance following the instructions below, but without bread.

OPERATION

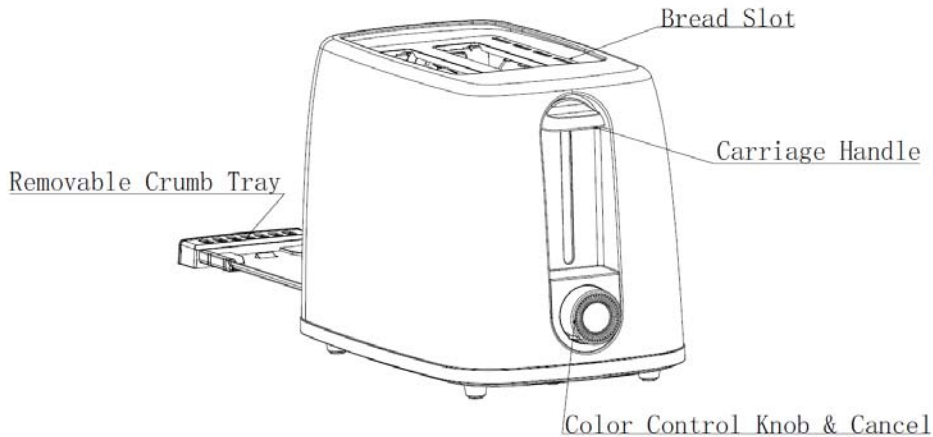

1. Place the bread slice into the bread slot. You can insert up to two slices at a time. Only regular-sized slices can be placed into the bread slot.
 - o Note: Ensure the crumb tray is completely positioned in place before using.
2. Plug the power cord into the outlet.
3. Set the color control knob to your desired color. There are 6 positions, with the lowest being white and the highest being dark brown. The bread slice can be toasted to a golden color at position "3".
 - o Note:
 - Toasting color for one slice will be darker than for double bread at the same level.



TECHNICAL DATA

Model: TA01116-GS. Voltage: 220-240 V ~ 50-60 Hz.

Power: 650 W.

EN ENVIRONMENT-FRIENDLY DISPOSAL

-If toasting continuously, the toasting color for the latter bread is darker than the color of the previous cycle at the same level.

-The color setting should be adjusted before toasting. It should not be adjusted during toasting.

4. Press the carriage handle down vertically until it locks in place. Once the bread has been toasted to the preset color, the carriage handle will automatically pop up, and you can remove the bread.

o Note: The carriage handle can only be latched when the appliance is connected to the power supply.

5. During the toasting process, you may observe the toasting color. If the desired toasting level is reached, you can turn the knob to the left to the CANCEL position to stop toasting. The next time you use it, you may need to adjust the toasting color range.

CAUTION

1. Remove all protective wrapping prior to toasting.
2. If the toaster starts to smoke, turn the knob to the left to stop toasting.
3. Avoid toasting food with extremely runny ingredients such as butter.
4. Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical outlet first. Be sure not to damage the internal mechanism or heating elements when removing bread.
5. The bread slot is only suitable for toasting regular bread slices.

CLEANING AND MAINTENANCE

1. Disconnect the power supply before cleaning.
2. Wipe the outside with a soft, dry cloth after the toaster cools down. Never use metal polish.
3. Pull out the crumb tray at the bottom of the toaster by the crumb tray handle and empty it. If the toaster is used frequently, accumulated bread crumbs should be removed at least once a week. Ensure the crumb tray is completely closed before using the toaster again.
4. When not in use or during storage, the power cord may be wound under the bottom of the toaster.



TECHNICAL DATA

Model: TA01116-GS. Voltage: 220-240 V ~ 50-60 Hz.

Power: 650 W.

EN

Due to the constant development of our products in terms of function and design, we reserve the right to make changes to the product without prior warning. We reserve the right to make amendments. In accordance with the WEEE directive, every member state must ensure correct collection, recovery, handling and recycling of electrical and electronic waste.

Private households in the EU can take used equipment to special recycling stations free of charge. In some member states you can, in certain cases, return the used equipment to the retailer from whom you purchased it, if you are purchasing new equipment. Contact your retailer, distributor or the municipal authorities for further information on what you should do with electrical and electronic waste.

Produced in China for ICA AB, Box 4075, 169 04 Solna, Sweden.

Customer contact: +46 (0)20-83 33 33 or ICA.se





TEKNISK SPECIFIKATION

Modell: TA01116-GS. Spänning: 220-240 V ~ 50-60 Hz.

Effekt: 650 W.

VIKTIGA SÄKERHETSÅTGÄRDER

SE

När du använder elektriska apparater bör grundläggande säkerhetsåtgärder alltid följas, inklusive följande:

1. Läs alla instruktioner.
2. Se till att din eluttag motsvarar spänningen som anges på brödrostens märkskylt.
3. Rör inte vid heta ytor. Använd endast handtag eller knoppar.
4. För att skydda mot elektrisk stöt, doppa inte sladden, kontakten eller någon del av brödrosten i vatten eller andra vätskor.
5. Noggrann övervakning är nödvändig när brödrosten används av eller nära barn.
6. Koppla ur enheten från uttaget när den inte används och innan rengöring.
7. Använd inte någon apparat med skadad sladd eller kontakt, eller om apparaten fungerar felaktigt. Om huvudsladden är skadad måste den bytas ut av tillverkaren, närmaste serviceagent eller en kvalificerad person.
8. Låt inte sladden hänga över kanten på ett bord eller en disk eller röra vid heta ytor.
9. Placera inte brödrosten på eller nära en het gas- eller elspis, eller i en uppvärmd ugn.
10. Använd inte apparaten för annat än dess avsedda användning.
11. Överdimensionerad mat, metallfoliepaket eller redskap får inte sättas in i brödrosten eftersom de kan orsaka brand eller elektrisk stöt.
12. Bröd kan brännas; därför får brödrostar inte användas nära eller under gardiner och andra brännbara material. De måste övervakas.
13. Användning av tillbehör som inte rekommenderas av apparattillverkaren kan orsaka skador.
14. Försök inte lossa mat när brödrosten är i drift.
15. Var noga med att ta ut brödet försiktigt efter rostning för att undvika skador.



TEKNISK SPECIFIKATION

Modell: TA01116-GS. Spänning: 220-240 V ~ 50-60 Hz.

Effekt: 650 W.

SE VIKTIGA SÄKERHETSÅTGÄRDER

16. Denna apparat har en jordad kontakt. Se till att vägguttaget i ditt hus är väl jordat.
17. Apparaten är inte avsedd att användas med en extern timer eller separat fjärrkontrollsystem.
18. Denna apparat kan användas av barn från 8 år och uppåt och personer med nedsatt fysisk, sensorisk eller mental förmåga, eller brist på erfarenhet och kunskap, om de har fått övervakning eller instruktioner om användning av apparaten på ett säkert sätt och förstår de risker som är inblandade. Barn får inte leka med apparaten. Rengöring och användarunderhåll får inte utföras av barn om de inte är äldre än 8 år och övervakas.
19. Håll apparaten och dess sladd utom räckhåll för barn under 8 år.
20. Varning: Om du rostar små brödsivor mindre än 85 mm i längd, var medveten om den potentiella risken för brännskador när du tar ut skivorna.
21. Använd inte apparaten utomhus.
22. Denna apparat är avsedd för hushållsbruk och liknande tillämpningar såsom:
 - o Personalens köksområden i butiker, kontor och andra arbetsmiljöer;
 - o Bondgårdar;
 - o Av kunder på hotell, motell och andra bostadsmiljöer;
 - o Bed and breakfast-miljöer.
23. Spara dessa instruktioner.

ENERGIFÖRBRUKNING

Produktinformation för strömförbrukning och maximal tid för att nå tillämpligt lågeffektläge.

Avstängd modell

0.1 W

Den maximala tid som behövs för att utrustningen automatiskt ska nå det tillämpliga lågeffektläget eller tillståndet.

1 min



TEKNISK SPECIFIKATION


Modell: TA01116-GS. Spänning: 220-240 V ~ 50-60 Hz.

Effekt: 650 W.

PRODUKTINTRODUKTION

SE

PRODUKTINTRODUKTION

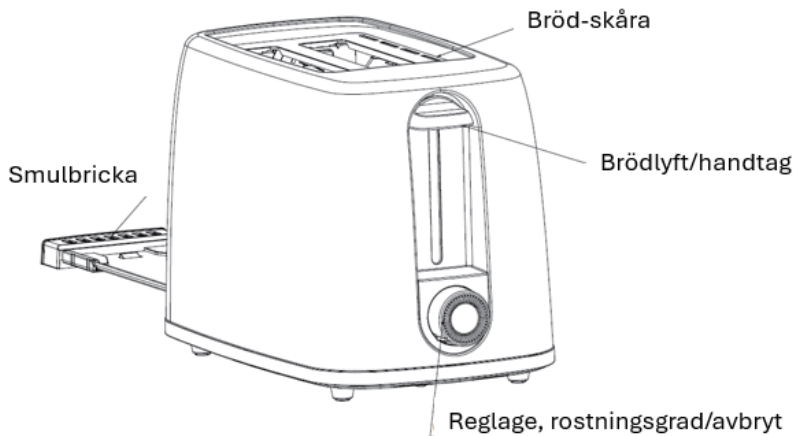

FÖR FÖRSTA ANVÄNDNINGEN

Eftersom det kan finnas tillverkningsrester eller olja kvar i brödrosten eller på värmeelementet, kan det avge en lukt vid första användningen. Detta är normalt och kommer inte att inträffa efter flera användningar. Innan du rostar den första brödskivan rekommenderas det starkt att du använder apparaten enligt instruktionerna nedan, men utan bröd.



TEKNISK SPECIFIKATION

Modell: TA01116-GS. Spänning: 220-240 V ~ 50-60 Hz.

Effekt: 650 W.

SE ANVÄNDNING

ANVÄNDNING

1. Placera brödskivan i brödsåran. Du kan sätta in upp till två skivor åt gången. Endast vanliga brödskivor kan placeras i brödsåran.
o Obs: Se till att smulbrickan är helt på plats innan användning.
2. Anslut strömsladden till uttaget.
3. Ställ in färgkontrollknappen på önskad färg. Det finns 6 lägen, där den lägsta är vit och den högsta är mörkbrun. Brödskivan kan rostas till en gyllene färg på läge "3".
o Obs:
-Rostningsfärgen för en skiva blir mörkare än för två skivor på samma nivå.
-Om du rostar kontinuerligt, är rostningsfärgen för det senare brödet mörkare än färgen på den föregående cykeln på samma nivå.
-Färginställningen bör justeras innan rostning. Den bör inte justeras under rostning.
4. Tryck ner handtaget vertikalt tills det låses på plats. När brödet har rostats till den förinställda färgen, kommer handtaget automatiskt att poppa upp, och du kan ta bort brödet.
o Obs: Brödliften kan endast låsas när apparaten är ansluten till strömförsörjningen.
5. Under rostningsprocessen kan du observera rostningsfärgen. Om den önskade rostningsnivån är uppnådd kan du vrida knappen till vänster till AVBRYT-läget för att stoppa rostningen. Nästa gång du använder den kan du behöva justera rostningsfärgområdet.

FÖRSIKTIGHET

1. Ta bort all skyddande förpackning innan rostning.
2. Om brödrosten börjar ryka, vrid knappen till vänster för att stoppa rostningen.
3. Undvik att rosta mat med extremt rinniga ingredienser som smör.
4. Försök aldrig att ta bort bröd som fastnat i skåror utan att först koppla ur brödrosten från eluttaget. Var noga med att inte skada den interna mekanismen eller värmeelementen när du tar bort brödet.
5. Brödsåran är endast lämplig för att rosta vanliga brödskivor.



TEKNISK SPECIFIKATION

Modell: TA01116-GS. Spänning: 220-240 V ~ 50-60 Hz.

Effekt: 650 W.

MILJÖVÄNLIG BORTSKAFFNING

SE

RENGÖRING OCH UNDERHÅLL

1. Koppla bort strömförsörjningen innan rengöring.
2. Torka av utsidan med en mjuk, torr trasa efter att brödrosten har svalnat. Använd aldrig metallpolish.
3. Dra ut smulbrickan på botten av brödrosten med smulbrickans handtag och töm den. Om brödrosten används ofta bör ackumulerade brödsmlur tas bort minst en gång i veckan. Se till att smulbrickan är helt stängd innan du använder brödrosten igen.
4. När den inte används eller under förvaring kan strömsladden lindas under botten av brödrosten.

Eftersom vi kontinuerligt utvecklar våra produkter med avseende på funktion och utformning förbehåller vi oss rätten att göra förändringar i produkten utan föregående varning. Vi förbehåller oss rätten att göra tillägg och rättelser. I enlighet med WEEE-direktivet måste alla medlemsstater ombesörja korrekt insamling, hantering och återvinning av elektriskt och elektroniskt avfall. Hushåll inom EU kan avgiftsfritt ta använd utrustning till speciella återvinningsstationer. I vissa medlemsstater kan du i vissa fall återlämna den använda utrustningen till inköpsstället om du köper ny utrustning. Kontakta din återförsäljare, din distributör eller din kommun om du behöver mer information om hur du hanterar elektriskt och elektroniskt avfall.

Producerad i Kina för ICA AB, Box 4075, 169 04 Solna, Sverige.

Kundkontakt: +46(0)20-83 33 33 eller ICA.se

