



CM9456-GS

Coffee Maker.....3
SE Kaffebryggare 1,5L9







TECHNICAL DATA

Model: CM9456-GS. Voltage: 220-240 V ~ 50-60 Hz.

Power: 750 W.

IMPORTANT SAFEGUARDS

EN

Read this booklet thoroughly before using and save it for future reference.

IMPORTANT SAFEGUARDS

Before using the electrical appliance, always follow these basic precautions:

1. Read all instructions.
2. Ensure your outlet voltage matches the voltage stated on the coffee maker's rating label.
3. Do not operate any appliance with a damaged cord or plug, or in an abnormal state. If the main cord is damaged, it must be replaced by the manufacturer, the nearest service agent, or a qualified person.
4. Do not touch hot surfaces. Use handles or knobs.
5. To protect against fire, electric shock, and injury, do not immerse the cord or plug in water or other liquids.
6. Unplug from the wall outlet before cleaning and when not in use. Allow the appliance to cool down completely before removing or attaching components or before cleaning.
7. The use of accessories not recommended by the appliance manufacturer may result in fire, electric shock, or injury.
8. The carafe is designed for use with this appliance. It cannot be used on a range top.
9. Do not clean the carafe with cleansers, steel wool pads, or other abrasive materials.
10. Do not hang the power cord over the edge of a table or counter, or touch hot surfaces.
11. Do not place the coffee maker on hot surfaces or near fire to avoid damage.
12. To disconnect, remove the plug from the wall outlet. Always hold



TECHNICAL DATA

Model: CM9456-GS. Voltage: 220-240 V ~ 50-60 Hz.

Power: 750 W.

EN IMPORTANT SAFEGUARDS

the plug, never pull the cord.

13. Do not use the appliance for other than its intended use and place it in a dry environment.

14. Close supervision is necessary when the appliance is used near children.

15. Be careful not to get burned by steam.

16. To disconnect, turn any control to "Off", then remove the plug from the wall outlet.

17. Do not let the coffee maker operate without water.

18. Never use the appliance if the carafe shows any signs of cracks. Only use the carafe with this appliance. Handle the carafe carefully as it is very fragile.

19. Do not set a hot carafe on a wet or cold surface.

20. Do not use a cracked carafe or a carafe with a loose or weakened handle.

21. Scalding may occur if the cover is removed during the brewing cycles.

22. Some parts of the appliance are hot when operated, so do not touch with hands. Use handles or knobs only.

23. Never leave the empty carafe on the warming plate as it may crack.

24. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

25. Children should be supervised to ensure they do not play with the appliance.

26. The coffee maker should not be placed in a cabinet when in use.



TECHNICAL DATA

Model: CM9456-GS. Voltage: 220-240 V ~ 50-60 Hz.

Power: 750 W.

KNOW YOUR COFFEE MAKER

EN

27. This appliance is intended for household and similar applications such as:

- Staff kitchen areas in shops, offices, and other working environments;
- Farmhouses;
- By clients in hotels, motels, and other residential-type environments;
- Bed and breakfast-type environments.

28. Do not use outdoors.

29. Save these instructions.

ENERGY CONSUMPTION

Product information for power consumption and maximum time to reach applicable low power mode.


Off model

0.415 W

The maximum time needed the equipment to automatically reach the applicable low power mode or condition.

39min

KNOW YOUR COFFEE MAKER

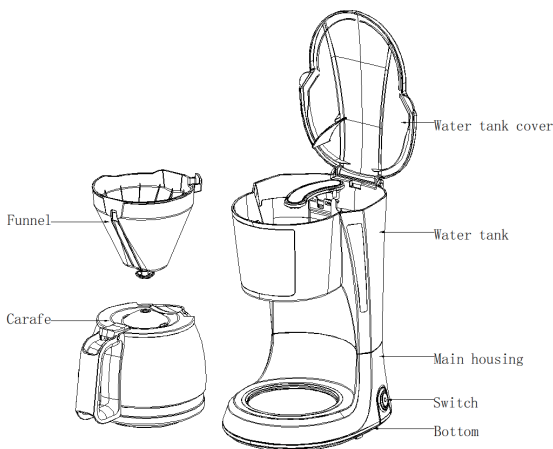



TECHNICAL DATA

Model: CM9456-GS. Voltage: 220-240 V ~ 50-60 Hz.

Power: 750 W.

EN USING YOUR COFFEE MAKER

BEFORE FIRST USE

Check that all accessories are complete and the unit is not damaged. Add clean water up to the maximum level to brew several times without coffee powder according to the steps below, and then discard the water. Wash the detachable parts thoroughly with warm water.

USING YOUR COFFEE MAKER

1. Open the water tank lid and fill the water tank with cold drinking water. The water level should not exceed the MAX level as indicated on the water gauge.

2. Swing the funnel holder out, place the funnel into the funnel holder, then place the filter paper in the funnel, ensuring it is assembled correctly.

3. Add coffee powder into the paper filter. Usually, a cup of coffee needs a level spoon of coffee powder, but you may adjust according to personal taste. Close the funnel holder; a click sound will be heard when the funnel holder is closed completely.

4. Insert the carafe on the warming plate horizontally.

5. Plug the power cord into the outlet.

6. Press the switch down; the indicator will be illuminated. The appliance will begin working.

• Note: During the brewing process, you may remove the carafe to serve for a

duration not exceeding 30 seconds, and the coffee maker will stop dripping automatically. If the serve time exceeds 30 seconds, the coffee will overflow the funnel.

7. Upon completion of brewing coffee, one minute after the coffee stops dripping out, you can remove the carafe, pour, and serve.

• Note: The brewed coffee you get will be slightly less than the water you have added as some water is absorbed by the coffee powder. DO NOT touch the cover, warming plate, and so on when operating as they are very hot.

8. The appliance will turn off automatically after 40 minutes. When the process is finished, if you do not want to serve immediately, keep the switch on; the coffee can be kept warm on the warming plate for 30 minutes. For optimal coffee taste, serve it just after brewing.

9. Always turn the coffee maker off and disconnect the power supply after use.

• Note: Be careful when pouring the coffee out, as the temperature of freshly brewed coffee is high.



TECHNICAL DATA

Model: CM9456-GS. Voltage: 220-240 V ~ 50-60 Hz.

Power: 750 W.

CLEANING AND MAINTENANCE

EN

CLEANING AND MAINTENANCE

CAUTION: Always unplug the product from the electrical outlet and allow the warming plate to cool completely before cleaning it. Never immerse the unit or power cord in water or any other liquid for cleaning.

1. Clean all detachable parts after each use in hot, soapy water.

2. Wipe the product's exterior surface with a soft, damp cloth to remove stains.

3. Water droplets may build up in the area above the funnel and drip onto the product base during brewing. To control the dripping, wipe off the area with a clean, dry cloth after each use.

4. Use a damp cloth to gently wipe the warming plate. Never use abrasive cleaners to clean it.

5. Replace all parts and keep them for the next use.

REMOVING MINERAL DEPOSITS

To keep your coffee maker operating efficiently, periodically clean away the mineral deposits left by the water according to the water quality in your area and the frequency of use. We recommend decalcifying your coffee maker as follows, using a solution of white vinegar and cold water. A solution of two tablespoons (30ml) of white vinegar in one carafe of cold water works best.

1. Fill the tank with the vinegar solution to the maximum level as indicated on the water gauge.

2. Insert the glass carafe onto the warming plate.

3. Ensure the paper filter (without coffee powder) and funnel are assembled in place.

4. Switch on the appliance and allow it to "brew" the descaling solution.

5. After brewing one cup of the solution, switch off the appliance.

6. Leave the solution to stay for 15 minutes and repeat steps 3-5.

7. Switch on the appliance and run off the solution until the water tank is completely empty.

8. Rinse by operating the appliance with water at least 3 times.



TECHNICAL DATA

Model: CM9456-GS. Voltage: 220-240 V ~ 50-60 Hz.

Power: 750 W.

EN HINTS FOR GREAT-TASTING COFFEE

HINTS FOR GREAT-TASTING COFFEE

- A clean coffee maker is essential for making great-tasting coffee. Regularly clean the coffee maker as specified in the "Cleaning and Maintenance" section.
- Always use fresh, cold water in the coffee maker.
- Store unused coffee powder in a cool, dry place. After opening a package of coffee powder, reseal it tightly and store it in a refrigerator to maintain its freshness.
- For optimal coffee taste, buy whole coffee beans and finely grind them just before brewing.
- Do not reuse coffee powder as this will greatly reduce the coffee's flavor. Reheating coffee is not recommended as coffee is at its peak flavor immediately after brewing.
- Clean the coffee maker when over-extraction causes oiliness. Small oil droplets on the surface of brewed black coffee are due to the extraction of oil from the coffee powder. Oiliness may occur more frequently if heavily roasted coffees are used.

ENVIRONMENT-FRIENDLY DISPOSAL

You can help protect the environment! Please remember to respect local regulations: hand in non-working electrical equipment to an appropriate waste disposal center.

Due to the constant development of our products in terms of function and design, we reserve the right to make changes to the product without prior warning. We reserve the right to make amendments. In accordance with the WEEE directive, every member state must ensure correct collection, recovery, handling and recycling of electrical and electronic waste.

Private households in the EU can take used equipment to special recycling stations free of charge. In some member states you can, in certain cases, return the used equipment to the retailer from whom you purchased it, if you are purchasing new equipment. Contact your retailer, distributor or the municipal authorities for further information on what you should do with electrical and electronic waste.

Produced in China for ICA AB, Box 4075, 169 04 Solna, Sweden.
Customer contact: +46 (0)20-83 33 33 or ICA.se





TEKNISK SPECIFIKATION

Modell: CM9456-GS. Spänning: 220-240 V ~ 50-60 Hz.

Effekt: 750 W.

VIKTIGA SÄKERHETSÅTGÄRDER

SE

Läs denna broschyr noggrant innan användning och spara den för framtida referens.

VIKTIGA SÄKERHETSÅTGÄRDER

Innan du använder den elektriska apparaten, följ alltid dessa grundläggande

försiktighetsåtgärder:

1. Läs alla instruktioner.
2. Se till att ditt eluttag matchar den spänning som anges på kaffe-bryggarens märkskylt.
3. Använd aldrig apparaten om sladden eller kontakten är skadad. Om huvudsladden är skadad måste den bytas ut av tillverkaren, närmaste serviceagent eller en kvalificerad person.
4. Rör inte vid heta ytor. Använd handtag eller knoppar.
5. För att skydda mot brand, elektrisk stöt och skada, doppa inte sladden eller kontakten i vatten eller andra vätskor.
6. Koppla ur apparaten från vägguttaget innan rengöring och när den inte används. Låt apparaten svalna helt innan du tar bort eller sätter fast komponenter och innan rengöring.
7. Användning av tillbehör som inte rekommenderas av tillverkaren kan resultera i brand, elektrisk stöt eller skada.
8. Kannan är designad för användning med denna apparat. Den kan inte användas på en spishäll.
9. Rengör inte kannan med rengöringsmedel, stålull eller andra slipande material.
10. Häng inte strömsladden över kanten på ett bord eller en disk eller röra vid heta ytor.
11. Placera inte kaffebryggaren på heta ytor eller nära eld för att undvika skador.
12. För att koppla ur, dra ur kontakten från vägguttaget. Håll alltid i



TEKNISK SPECIFIKATION

Modell: CM9456-GS. Spänning: 220-240 V ~ 50-60 Hz.

Effekt: 750 W.

SE VIKTIGA SÄKERHETSÅTGÄRDER

kontakten, dra aldrig i sladden.

13. Använd inte apparaten för annat än dess avsedda användning och placera den i en torr miljö.

14. Noggrann övervakning är nödvändig när apparaten används nära barn.

15. Var försiktig så att du inte bränner dig på ångan.

16. För att koppla ur, vrid alla kontroller till "Av", ta sedan bort kontakten från vägguttaget.

17. Låt inte kaffebryggaren arbeta utan vatten.

18. Använd aldrig apparaten om karaffen visar några tecken på sprickor. Använd endast kannan med denna apparat. Hantera kannan försiktigt eftersom den är mycket ömtålig.

19. Ställ inte en het kannan på en våt eller kall yta.

20. Använd inte en sprucken kanna eller en kanna med ett löst eller försvagat handtag.

21. Skållning kan inträffa om locket tas bort under bryggcyklerna.

22. Vissa delar av apparaten är heta när de används, så rör inte med händerna. Använd endast handtag eller knoppar.

23. Lämna aldrig den tomma kannan på värmeplattan eftersom den kan spricka.

24. Denna apparat är inte avsedd att användas av personer (inklusive barn) med nedsatt fysisk, sensorisk eller mental förmåga, eller brist på erfarenhet och kunskap, om de inte har fått övervakning eller instruktioner om användning av apparaten av en person som ansvarar för deras säkerhet.

25. Barn bör övervakas för att säkerställa att de inte leker med apparaten.

26. Kaffebryggaren bör inte placeras i ett skåp när den används.

27. Denna apparat är avsedd för hushållsbruk och liknande tillämp-



TEKNISK SPECIFIKATION

Modell: CM9456-GS. Spänning: 220-240 V ~ 50-60 Hz.

Effekt: 750 W.

KÄNN DIN KAFFEBRYGGARE

SE

ningar såsom:

- Personalens köksområden i butiker, kontor och andra arbetsmiljöer;
- Bondgårdar;
- Av kunder på hotell, motell och andra bostadsmiljöer;
- Bed and breakfast-miljöer.

28. Använd inte utomhus.

29. Spara dessa instruktioner.

ENERGIFÖRBRUKNING

Produktinformation för strömförbrukning och maximal tid för att nå tillämpligt lågeffektläge.


Avstängd modell

0.415 W

Den maximala tid som behövs för att utrustningen automatiskt ska nå det tillämpliga lågeffektläget eller tillståndet.

39min

KÄNN DIN KAFFEBRYGGARE

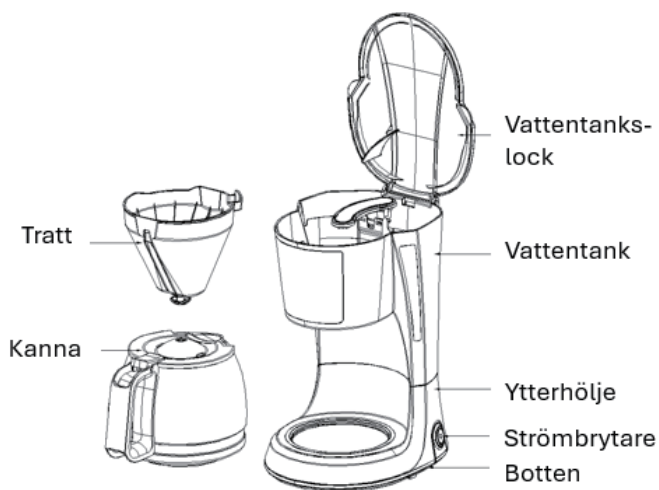



TEKNISK SPECIFIKATION

Modell: CM9456-GS. Spänning: 220-240 V ~ 50-60 Hz.

Effekt: 750 W.

SE INNAN FÖRSTA ANVÄNDNINGEN

INNAN FÖRSTA ANVÄNDNINGEN

Kontrollera att alla tillbehör är kompletta och att enheten inte är skadad. Fyll på rent vatten upp till maxnivån för att brygga flera gånger utan kaffepulver enligt stegen nedan, och håll sedan ut vattnet. Rengör de löstagbara delarna noggrant med varmt vatten.

ANVÄNDNING AV DIN KAFFEBRYGGARE

1. Öppna locket till vattentanken och fyll vattentanken med kallt dricksvatten. Vattennivån bör inte överstiga MAX-nivån som anges på vattenmätaren.

2. Sväng ut trattens hållare, placera tratten i trattens hållare, sätt sedan filterpapperet i tratten och se till att det är korrekt monterat.

3. Tillsätt kaffepulver i pappersfiltret. Vanligtvis behövs en sked kaffepulver för en kopp kaffe, men du kan justera efter personlig smak. Stäng trattens hållare; ett klickljud hörs när trattens hållare är helt stängd.

4. Sätt in kannan på värmeplattan.

5. Anslut strömsladden till uttaget.

6. Tryck ner strömbrytaren; indikatorn tänds. Apparaten börjar arbeta.

• Obs: Under bryggprocessen kan du ta bort kannan för att servera under en tid som inte överstiger 30 sekunder, och kaffebryggaren slutar droppa automatiskt. Om serveringstiden överstiger 30 sekunder kommer kaffet att rinna över tratten.

7. När bryggningen av kaffet är klar, en minut efter att kaffet har slutat droppa, kan du ta bort kannan, hälla upp och servera.

• Obs: Det bryggda kaffet du får kommer att vara något mindre än vattnet du har tillsatt eftersom en del vatten absorberas av kaffepulvret. RÖR INTE vid locket, värmeplattan och så vidare när du använder apparaten eftersom de är mycket heta.

8. Apparaten stängs av automatiskt efter 40 minuter. När processen är klar, om du inte vill servera omedelbart, håll strömbrytaren på; kaffet kan hållas varmt på värmeplattan i 30 minuter. För optimal kaffesmak, servera det direkt efter brygning.

9. Stäng alltid av kaffebryggaren och koppla bort strömförsörjningen efter användning.

• Obs: Var försiktig när du håller upp kaffet, eftersom temperaturen på nybryggt kaffe är hög.



TEKNISK SPECIFIKATION

Modell: CM9456-GS. Spänning: 220-240 V ~ 50-60 Hz.

Effekt: 750 W.

RENGÖRING OCH UNDERHÅLL

SE

RENGÖRING OCH UNDERHÅLL

VARNING: Koppla alltid ur produkten från eluttaget och låt värmeplattan svalna helt innan rengöring. Doppa aldrig enheten eller strömsladden i vatten eller någon annan vätska för rengöring.

1. Rengör alla löstagbara delar efter varje användning med varmt vatten och diskmedel.
2. Torka av produktens yttre yta med en mjuk, fuktig trasa för att ta bort fläckar.
3. Vattendroppar kan byggas upp i området

ovanför tratten och droppa ner på produktens bas under bryggning. För att kontrollera droppandet, torka av området med en ren, torr trasa efter varje användning.

4. Använd en fuktig trasa för att försiktigt torka av värmeplattan. Använd aldrig slipande rengöringsmedel för att rengöra den.

5. Sätt tillbaka alla delar och förvara dem för nästa användning.

BORTTAGNING AV MINERALAVLAGRINGAR

För att hålla din kaffebryggare i effektiv drift, rengör regelbundet och ta bort mineralavlagringar som lämnas av vattnet beroende på vattenkvaliteten i ditt område och användningsfrekvensen. Vi rekommenderar att du avkalkar din kaffebryggare enligt följande med en lösning av ättika och kallt vatten. En lösning av två matskedar (30 ml) ättika i en kanna med kallt vatten fungerar bäst.

1. Fyll tanken med ättikslösningen upp till maxnivån som anges på vattenmätaren.
2. Sätt in kannan på värmeplattan.
3. Se till att pappersfiltret (utan kaffepulver) och tratten är monterade på plats.

4. Slå på apparaten och låt den "brygga" avkalkningslösningen.

5. Efter att ha bryggt en kopp av lösningen, stäng av apparaten.

6. Låt lösningen stå i 15 minuter och upprepa steg 3-5.

7. Slå på apparaten och kör lösningen tills vattentanken är helt tom.

8. Skölj genom att köra apparaten med vatten minst 3 gånger.



TEKNISK SPECIFIKATION

Modell: CM9456-GS. Spänning: 220-240 V ~ 50-60 Hz.

Effekt: 750 W.

SE MILJÖVÄNLIG BORTSKAFFNING

TIPS FÖR GODARE KAFFE

En ren kaffebryggare är avgörande för att göra gott kaffe. Rengör kaffebryggaren regelbundet enligt anvisningarna i avsnittet "Rengöring och underhåll". Använd alltid färskt, kallt vatten i kaffebryggaren. Förvara oanvänt kaffepulver på en sval, torr plats. Efter att ha öppnat ett paket kaffepulver, förslut det tätt och förvara det i kylskåp för att bevara dess fräschör. För optimal kaffesmak, köp hela kaffebönor och mal dem fint precis innan bryggning. Återanvänd inte kaffepulver eftersom detta kraftigt minskar kaffets smak. Återuppvärmning av kaffe rekommenderas inte eftersom kaffe är som bäst direkt efter bryggning. Rengör kaffebryggaren när överextraktion orsakar oljighet. Små oljedroppar på ytan av bryggt svart kaffe beror på extraktion av olja från kaffepulvret. Oljighet kan förekomma oftare om kraftigt rostade kaffesorter används.

MILJÖVÄNLIG BORTSKAFFNING

Du kan hjälpa till att skydda miljön! Kom ihåg att respektera lokala föreskrifter: lämna in icke-fungerande elektrisk utrustning till en lämplig avfallsanläggning.

Eftersom vi kontinuerligt utvecklar våra produkter med avseende på funktion och utformning förbehåller vi oss rätten att göra förändringar i produkten utan föregående varning. Vi förbehåller oss rätten att göra tillägg och rättelser. I enlighet med WEEE-direktivet måste alla medlemsstater ombesörja korrekt insamling, hantering och återvinning av elektriskt och elektroniskt avfall.

Hushåll inom EU kan avgiftsfritt ta använd utrustning till speciella återvinningsstationer. I vissa medlemsstater kan du i vissa fall återlämna den använda utrustningen till inköpsstället om du köper ny utrustning. Kontakta din återförsäljare, din distributör eller din kommun om du behöver mer information om hur du hanterar elektriskt och elektroniskt avfall.

Producerad i Kina för ICA AB, Box 4075, 169 04 Solna, Sverige.

Kundkontakt: +46(0)20-83 33 33 eller ICA.se



