



HB6070X-GS

Hand blender.....3

SE Stavmixer.....8







TECHNICAL DATA

Model: HB6070X-GS. Voltage: 220-240 V ~ 50-60 Hz.

Power: 400 W.

IMPORTANT SAFEGUARDS

EN

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Before using, ensure that the voltage of the wall outlet corresponds to the one shown on the rating plate.
3. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment.
4. If the supply cord is damaged, it must be replaced by the manufacturer, an authorized service agent, or a qualified technician to avoid hazard.
5. To protect against the risk of electrical shock, do not immerse the appliance in water or other liquids.
6. Always disconnect the blender from the power supply if it is left unattended and before assembling, disassembling, or cleaning.
7. Switch off the appliance and disconnect it from the power supply before changing accessories or approaching parts that move during use.
8. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
9. Do not blend hot liquids.
10. Do not immerse the upper part of the blender in water as this could cause an electric shock.
11. Close supervision is necessary when the appliance is used near children or infirm persons.
12. Avoid contacting moving parts.
13. Keep hands and utensils out of the container while blending to reduce the risk of severe injury or damage to the blender. A scraper may be used, but only when the blender is not running.
14. The appliance should not be used for blending hard and dry



TECHNICAL DATA

Model: HB6070X-GS. Voltage: 220-240 V ~ 50-60 Hz.

Power: 400 W.

EN IMPORTANT SAFEGUARDS

- substances, as this could blunt the blade.
15. The use of accessories not recommended by the manufacturer may cause injuries.
 16. Do not operate the appliance for purposes other than its intended use.
 17. The appliance can be used by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
 18. Children should not play with the appliance.
 19. This appliance should not be used by children. Keep the appliance and its cord out of reach of children.
 20. Do not allow children to use the blender without supervision.
 21. Be sure to switch off the appliance after each use. Ensure the motor stops completely before disassembling.
 22. The metal blade is extremely sharp; please handle it carefully.
 23. Be aware of potential injury from misuse.
 24. This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
 25. Save these instructions.



TECHNICAL DATA


Model: HB6070X-GS. Voltage: 220-240 V ~ 50-60 Hz.

Power: 400 W.

OPERATION

EN

KNOW YOUR BLENDER

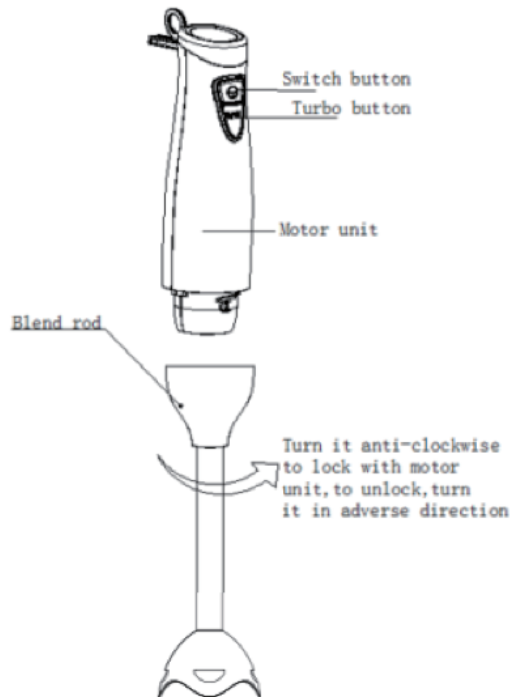

KNOW YOUR BLENDER

- The maximum operation duration per use should be less than 30 seconds, with a 3-minute rest period between two consecutive cycles.
- To assemble the blending rod with the motor unit, turn the blending rod counterclockwise until it is tightened. To disassemble, turn it in the opposite direction.
- Connect the hand blender to the power outlet.
- Lower the hand blender into the food, then press and hold the Switch button to start operating. To stop the hand blender, release the Switch button.
- To operate the hand blender at high speed, press and hold the Turbo button. To stop the hand blender, release the Turbo button.
- When stirring honey, add 200g of honey and 30g of maltose to the container and stir.



TECHNICAL DATA

Model: HB6070X-GS. Voltage: 220-240 V ~ 50-60 Hz.

Power: 400 W.

EN ENVIRONMENT-FRIENDLY DISPOSAL

CLEANING AND MAINTENANCE

- Unplug the appliance and remove the detachable blending rod.
- NOTE: Do not immerse the detachable blending rod in water, as the lubrication on the bearings may be washed away over time.
- Wash the detachable blending rod under running water without using abrasive cleaners or detergents. After cleaning, place it upright to allow any water to drain out.
- Wipe the motor unit with a damp cloth. Never immerse it in water, as this could cause an electric shock.
- Dry thoroughly.
- CAUTION: Blades are very sharp; handle with care.

QUICK CLEANING

- Between processing tasks, hold the hand blender in a cup half-filled with water and turn on the appliance for a few seconds.



TECHNICAL DATA

Model: HB6070X-GS. Voltage: 220-240 V ~ 50-60 Hz.

Power: 400 W.

EN

Due to the constant development of our products in terms of function and design, we reserve the right to make changes to the product without prior warning. We reserve the right to make amendments. In accordance with the WEEE directive, every member state must ensure correct collection, recovery, handling and recycling of electrical and electronic waste.

Private households in the EU can take used equipment to special recycling stations free of charge. In some member states you can, in certain cases, return the used equipment to the retailer from whom you purchased it, if you are purchasing new equipment. Contact your retailer, distributor or the municipal authorities for further information on what you should do with electrical and electronic waste.

Produced in China for ICA AB, Box 4075, 169 04 Solna, Sweden.
Customer contact: +46 (0)20-83 33 33 or ICA.se





TEKNISK SPECIFIKATION

Modell: HB6070X-GS. Spänning: 220-240 V ~ 50-60 Hz.

Effekt: 400 W.

VIKTIGA SÄKERHETSÅTGÄRDER

SE

När du använder elektriska apparater bör grundläggande säkerhetsåtgärder alltid följas, inklusive följande:

1. Läs alla instruktioner.
2. Innan användning, se till att vägguttagets spänning motsvarar den som visas på märkskylten.
3. Använd inte någon apparat med en skadad sladd eller kontakt, eller om att apparaten har funktionsfel, tappats eller skadats på något sätt. Lämna apparaten till närmaste auktoriserade serviceanläggning för undersökning, reparation, elektrisk eller mekanisk justering.
4. Om strömsladden är skadad måste den bytas ut av tillverkaren, en auktoriserad serviceagent eller en kvalificerad tekniker för att undvika fara.
5. För att skydda mot risken för elektrisk stöt, sänk inte ner apparaten i vatten eller andra vätskor.
6. Koppla alltid bort mixern från strömförsörjningen om den lämnas obebakad och innan montering, demontering eller rengöring.
7. Stäng av apparaten och dra ur kontakten innan du byter tillbehör eller närmar dig rörliga delar under användning.
8. Låt inte sladden hänga över kanten på ett bord eller en disk, eller röra vid varma ytor.
9. Blanda inte heta vätskor.
10. Sänk inte ner den övre delen av mixern i vatten eftersom detta kan orsaka elektrisk stöt.
11. Noggrann övervakning är nödvändig när apparaten används nära barn eller personer med funktionsnedsättning.
12. Undvik kontakt med rörliga delar.
13. Håll händer och redskap borta från behållaren medan du blandar för att minska risken för allvarlig skada eller skada på mixern. En skrapa kan användas, men endast när mixern inte är igång.
14. Använd inte apparaten för att blanda hårda och torra ingredienser, eftersom detta kan göra bladet slött.



TEKNISK SPECIFIKATION

Modell: HB6070X-GS. Spänning: 220-240 V ~ 50-60 Hz.

Effekt: 400 W.

SE VIKTIGA SÄKERHETSÅTGÄRDER

- er, eftersom detta kan göra bladet slött.
15. Användning av tillbehör som inte rekommenderas av tillverkaren kan orsaka skador.
 16. Använd inte apparaten för andra ändamål än dess avsedda användning.
 17. Apparaten kan användas av personer med nedsatt fysisk, sensorisk eller mental förmåga, eller brist på erfarenhet och kunskap, om de har fått tillsyn eller instruktioner om användning av apparaten på ett säkert sätt och förstår de risker som är inblandade.
 18. Barn ska inte leka med apparaten.
 19. Denna apparat ska inte användas av barn. Håll apparaten och dess sladd utom räckhåll för barn.
 20. Låt inte barn använda mixern utan tillsyn.
 21. Se till att stänga av apparaten efter varje användning. Se till att motorn stannar helt innan du demonterar.
 22. Metallbladet är extremt vasst; hantera det försiktigt.
 23. Var medveten om risken för skada vid felaktig användning.
 24. Den här apparaten är avsedd att användas för hushållstillämpningar och liknande tillämpningar som
 - i personalkök i butiker, på kontor och i andra arbetsmiljöer
 - på bondgårdar
 - av kunder på hotell, motell och i andra temporära boenden
 - i bed & breakfast-miljöer.
 25. Spara dessa instruktioner.



TEKNISK SPECIFIKATION


Modell: HB6070X-GS. Spänning: 220-240 V ~ 50-60 Hz.

Effekt: 400 W.

PRODUKTINTRODUKTION

SE

KÄNN DIN MIXER

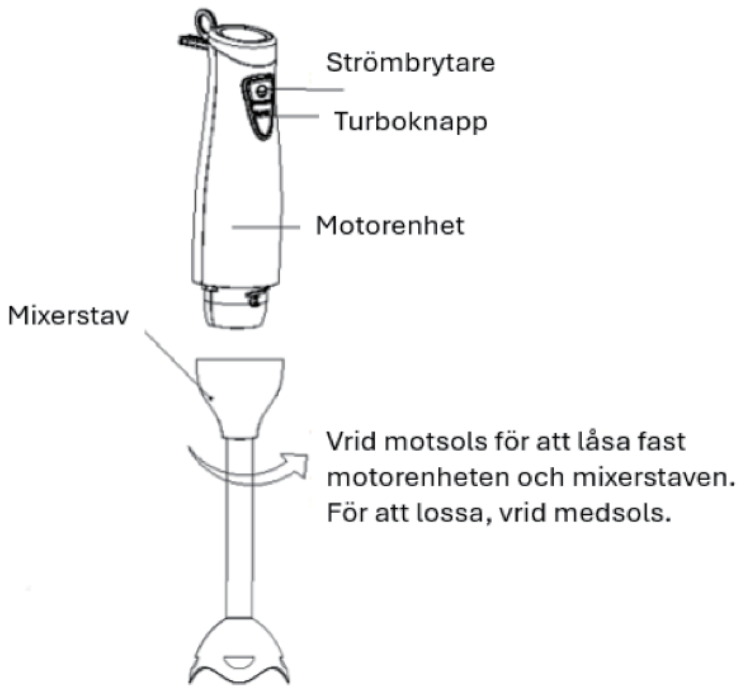

ANVÄNDNING AV DIN MIXER

- Maximal drifttid per användning bör vara mindre än 30 sekunder, med en viloperiod på 3 minuter mellan två på varandra följande cykler.
- För att montera mixerstaven med motorenheten, vrid mixerstaven moturs tills den är åtdragen. För att demontera, vrid i motsatt riktning.
- Anslut handmixern till strömuttaget.
- Sänk ned mixerstaven i maten och tryck sedan och håll in strömbrytaren för att starta. För att stoppa handmixern, släpp strömbrytaren.
- För att använda handmixern på hög hastighet, tryck och håll in Turbo-knappen. För att stoppa handmixern, släpp Turbo-knappen.
- När du rör honung, tillsätt 200 g honung och 30 g maltos i behållaren och rör om.



TEKNISK SPECIFIKATION

Modell: HB6070X-GS. Spänning: 220-240 V ~ 50-60 Hz.

Effekt: 400 W.

SE ANVÄNDNING

RENGÖRING OCH UNDERHÅLL

- Koppla ur apparaten och ta bort den löstagbara mixerstaven.
 - OBS: Sänk inte ner den löstagbara mixerstaven i vatten, eftersom smörjningen på lagren kan tvättas bort med tiden.
 - Tvätta den löstagbara mixerstaven under rinnande vatten utan att använda slipande rengöringsmedel eller diskmedel. Efter rengöring, ställ den upprätt så att eventuellt vatten kan rinna ut.
 - Torka av motorenheten med en fuktig trasa. Sänk aldrig ner den i vatten, eftersom detta kan orsaka elektrisk stöt.
 - Torka noggrant.
- VARNING: Bladen är mycket vassa; hantera med försiktighet.

SNABBRENGÖRING

- Vid paus mellan arbetsuppgifter, håll mixerstaven i en kopp halvfyllt med vatten och slå på apparaten i några sekunder.



TEKNISK SPECIFIKATION

Modell: HB6070X-GS. Spänning: 220-240 V ~ 50-60 Hz.

Effekt: 400 W.

SE

Eftersom vi kontinuerligt utvecklar våra produkter med avseende på funktion och utformning förbehåller vi oss rätten att göra förändringar i produkten utan föregående varning. Vi förbehåller oss rätten att göra tillägg och rättelser. I enlighet med WEEE-direktivet måste alla medlemsstater ombesörja korrekt insamling, hantering och återvinning av elektriskt och elektroniskt avfall.

Hushall inom EU kan avgiftsfritt ta använd utrustning till speciella återvinningsstationer. I vissa medlemsstater kan du i vissa fall återlämna den använda utrustningen till inköpsstället om du köper ny utrustning. Kontakta din återförsäljare, din distributör eller din kommun om du behöver mer information om hur du hanterar elektriskt och elektroniskt avfall.

Producerad i Kina för ICA AB, Box 4075, 169 04 Solna, Sverige.
Kundkontakt: +46(0)20-83 33 33 eller ICA.se

